

Aquaport



HWC-400

User's Manual & Warranty



Please read through the instructions carefully before using the product and ensure the manual is kept in a safe place for future reference.

Aquaport



International

Aquaport International Pty Ltd
Locked Bag 6
Adelaide SA 5001 Australia
Telephone +61 8 8354 0711
Facsimile +61 8 8354 0722
E-mail contact@aquaport.com
Website www.aquaport.com.au





Mission Statement

“To be an International Market leader in the manufacturing and distribution of a competitive range of quality, state of the art Water Coolers, Refrigerators and associated products.”

Company Profile

Aquaport International Pty Ltd is an Australian based company with an established global network. We are currently offering and securing exclusive agents in most countries world wide.

At Aquaport International Pty Ltd, we manufacture and distribute a wide range of products including Bottles Water Coolers, Mains Pressure Coolers, Thermo Eskies, TECM (Thermo Electric Cooling Modules) and also manufacture sub assemblies and have the ability to produce customized products.

We are one of the very few companies world wide that manufacture our own TECMs for our specific product range. W currently operate two manufacturing plants, one for the TECMs and the other for product assemblies, which have the combined capacity to produce over one million items per annum.

In addition to this, we greatly value the importance of professionalism and integrity and look forward to an opportunity to demonstrate this to you.

 
IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed:


- Read all instructions carefully.
- To protect against fire, electric shock and personal injury, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Turn all control to "off" then remove plug from wall outlet.
- Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS

Identification

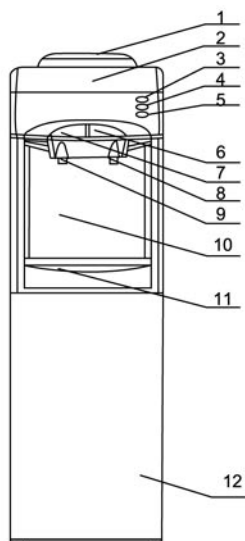

(FRONT)

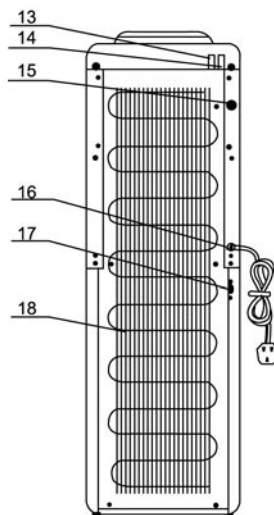 

(REAR)

No	PART NAME	No	PART NAME
1	Bottle Supporter	10	Front Carapace
2	Cover	11	Water Collector
3	Keeping Warm Lamp	12	Door
4	Heating Pilot Lamp	13	Cooling Switch
5	Cooling Pilot Lamp	14	Heating Switch
6	Cold Water Button	15	Thermostat
7	Hot Water Button	16	Power Supply Cord
8	Cold Water Tap	17	Outlet for Hot Water
9	Hot Water Tap	18	Condenser

NOTE:

This machine is suitable for bottles up to 15 litres and use of spring or filtered water.

This units operating temperature is from 10°C-38°C with relative humidity not higher than 90%.

User's Manual & Warranty

 
Function

This product is capable of serving hot & cold water all day long, which could be used for tea, coffee and juices. With it's large capacity fridge it is also perfect for storing milk, foods or other drinks.

Produced with advanced technology and assembled with high quality materials, this product is safe and hygienic, it works fast but consumes little energy, it is also very stylish and modern.


Operation

1. Vertically insert the bottle into the bottle supporter on top of the machine, the spike will pierce the bottle cap, then open the red tap until water runs out.
2. Insert the plug into the wall socket, then turn the power switch ON.
3. Vertically pull out the water bottle with two hands when the bottle is empty, and replace it with another bottle.

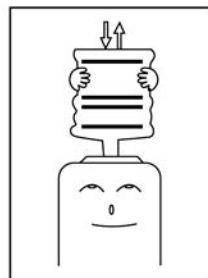







Operation

 1. Keep this machine in a dry and cool place and avoid direct sunlight. Never put the machine on paper or foam, which may store water and cause creepage. Never put anything flammable beside this machine.
2. **NEVER turn on the heating switch before the water runs out from the red tap, otherwise the machine could be damaged.**

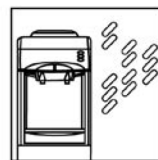

Operation

      3. In the case the hot or cold water is not needed for a prolonged period, turn off the heating & cooling switches in order to conserve energy.
4. In the case you won't be using this machine for a long period, turn off the heating & cooling switches, unplug this machine from the power socket and drain the water tank through the opening.
5. Clean the outside of the machine by wiping it with a clean dry cloth. Never use harsh, abrasive or organic solvents on the machine or any of its parts. Never disassemble or touch the inside of the machine, this could result in electric shock.
6. Never unplug by pulling the power cord as it will cause cord damage. Always turn on/off the machine by switching the heating or cooling switches on the machine.
7. Never operate this machine with a damage cord. return this machine to the nearest authorised service facility for repair or adjustment.
8. Never turn this machine upside down or tilt is at more than 45°.
9. The thermostat has been adjusted, there is no need to adjust it by yourself.
10. This machine should not be turn on within 3 minutes of turning this machine off.
11. The first time you turn on the refrigerator function, leave the refrigerator on for 2 hours before putting anything inside. Never put wet or hot items in the refrigerator compartment. Leave a gap between items in the refrigerator to ensure the interior airflow.

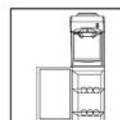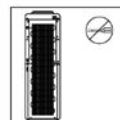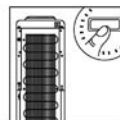


User's Manual & Warranty

Technical Details

Model	Power Supply	Water Capacity		Rated Power		Net Weight	Refrigeration Temperature
		Hot	Cold	Heating	Cooling		
HWC-400	240V/50Hz	5 Lph >90°C	1 Lph >10°C	420W	100W	20Kg	0-10°C

 Electrical Diagram

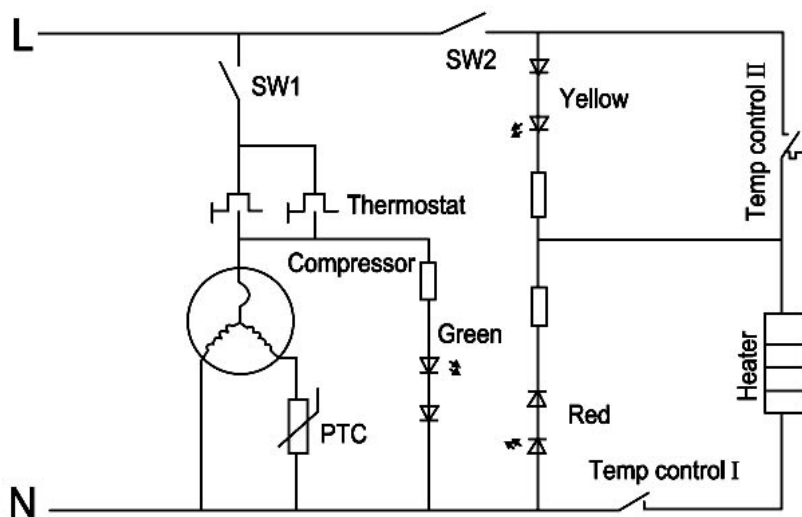

Cleaning

Switch off the power supply and unplug the power cord from the wall socket before following the instructions below.

Cleaning & Draining:

1. The machine was disinfected before departing from the factory. Cleaning the dispenser prior to installing a full bottle of water for the first time, is required.
2. Before cleaning, make sure the power switch is off and the cord is unplugged.
 - Vertically insert the bottle into the supporter on top of the machine.
 - Open the taps, let about 1 litre of water flow out into a container.
 - Remove the water bottle from the dispenser.
 - Place a large bucket beneath the drain outlet. Remove the drain cover and allow water to drain.
 - After draining, replace the drain cover.

Attention:

The machine heats water to a temperature of approximately 90°C, it can cause severe burns. Please operate the machine carefully.

Sanitation:

The machine should be sanitized with disinfectant commonly bought from a supermarket. Follow the instructions outlined for use of the disinfectant and thoroughly flush the machine as per the cleaning and draining instructions above, after disinfection. Generally this should be done every 3 months.

To Remove Mineral Deposits:

Mix 4 litres of water with 200g citric acid crystals, pour into machine and make sure the water can flow out of the hot tap. Switch on the power and heat for about 10 minutes. 30 minutes later, drain off the liquid and clean the machine with water 2 to 3 times. Generally this should be done every 3 months. Never disassemble the machine by yourself to avoid damaging the machine.

[illegible]

YOUR AQUAPORT 12 MONTH REPLACEMENT WARRANTY & WARRANTY REGISTRATION

Aquaport warrants this appliance to the first purchaser as follows and subject to the stated conditions:

Any fault in the appliance occurring within the first twelve months from the date of purchase (3 months commercial use) will be repaired or the unit will be replaced at our discretion.

Conditions of this Warranty

1. This appliance must be installed in accordance with the User's Manual.
2. The Warranty extends only to repairing or replacing any component that proves to be defective in material or workmanship.
3. The Warranty does not cover defects occasioned by misuse, alterations or accident.
4. In the unlikely event of malfunction of our product please phone our customer service line for advice on +61 8 8354 0711 in Australia or take it to your nearest Service Centre. Alternatively, simply return the faulty appliance to your place of purchase, along with your purchase receipt.

Thank you for your custom and we hope our product provides many years of fault free operation.

To enable us to register your warranty and provide service should a problem occur, we recommend you fill out the section below and return it to us immediately.



WARRANTY & SERVICE REGISTRATION FORM

Please fill in and return by fax or post to Aquaport International

Postal address: Locked Bag 6, Adelaide, South Australia, 5001 – AUSTRALIA

Fax: +61 8 8354 0722

Contact Name: _____

Phone: _____ Fax: _____ Mobile: _____

Address: _____ Email: _____

Country: _____ Post Code: _____

MODEL NUMBER: _____ SERIAL NUMBER: _____

Date of Purchase: _____ Purchase From: _____

Private or Commercial use: _____ If commercial state

Company Name: _____

[illegible]

Aquaport



Aquaport TTX Range Water Coolers



Olivia

Cold/Room
AQP-10C



Alessia

 
Cold/Room
AQP-12



Mari

Cold/Room
AQP-14C

Aquaport

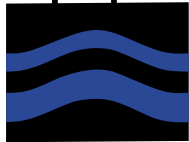

International

Aquaport International Inc
Locked Bag 6
Adelaide SA 5001 Australia
Telephone +61 8 8354 0711
Facsimile +61 8 8354 0722
E-mail contact@aquaport.com
Website www.aquaport.com.au